



# Ice Quake

Snow Shield

Ice Quake

The Ice Quake Assemblies are installed on the edge of the antenna reflector by drilling 2 each 3/8" holes into the edge of the reflector and mounting the vibration isolator pads. These pads cause the vibration to transfer into the Snow Shield and not into the antenna's reflector

